

Universal TV Remote Control

The remote control can be programmed as follows:

Step 1: Manually turn on TV.

Step 2: Press and hold power on/off button directed towards your TV. when the TV switches off release The power on/off button then press it again to turn on the TV. The remote control is now programmed.

Functions:

Power button: press power button to turn your TV on or off

Volume button: use volume + or - buttons to increase/decrease the volume level.

Channel button: use channel + or - to select the desired channel.

Mute button: press mute button to turn on/off audio.

Battery installation:

To install the batteries open the velcro fastenings on the football and gently pull out the battery compartment. Use a screwdriver to remove the screw on the battery compartment cover and insert 2 new 1,5V AAA batteries. For best results use lithium or alkaline batteries Ensure that the batteries are installed correctly with the polarities as shown in the battery compartment Replace the compartment lid and screw push back into the football and fasten the Velcro fastenings.

Please, dispose of used batteries by taking them to your local electrical waste disposal plant. Do not mix batteries of different types or old and new batteries Do not throw batteries in a fire or expose them to heat as this may cause them to explode.

Addendum: If your remote does not pick up the code for your TV by pressing the Power button repeat the process by pressing the Mute button instead of the Power button until the correct code is picked up and all the buttons function correctly.

Do not dispose of this product when it has reached the end of its useful life with normal household rubbish. Please take it to your local approved electrical waste recycling centre for disposal.